



ECS

ELECTRONIC CIGARETTE STORE

www.electroniccigarettestore.co.za


ECS 88 Instruction Manual



Content

Components	01
Initial Use	02
Charging the Box	03
Charging the Batteries	05
Replacing the Batteries	07
Replacing the Cartridges	08
Cartridge Ingredients	08
Refilling the Cartridges	09
Cartridge Care and Safety	10
Tips Section	11
Suitable Users	12
Customer Care	13

Components

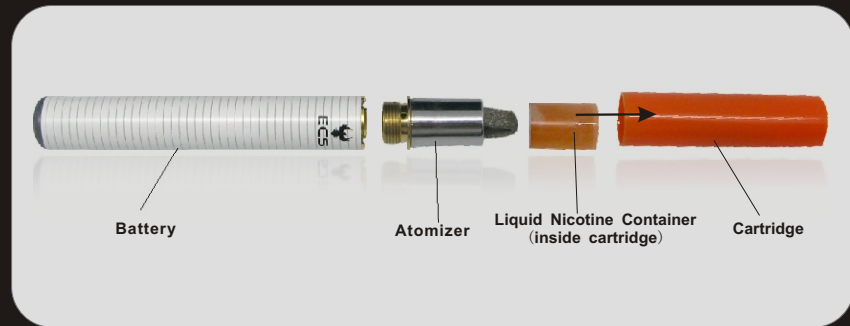

Initial Use

For optimal performance, it is recommended that you 1st fully charge the batteries and carry box before using.

You will notice that one of the batteries and the atomizer are pre-assembled along with an empty cartridge. Simply replace the empty cartridge with a full one by placing it firmly onto the atomizer. To make sure the cartridge is secure, twist it slightly.

There is no on or off switch the ECS 88 is always in stand by mode and ready for use. As you press the ECS 88 to your lips and inhale, the orange LED light at the tip will glow like a real cigarette to let you know its working, when you stop inhaling the ECS 88 will stop producing vapour and return to stand by mode.

Charging the Box

The box doubles as a protection box for your electronic cigarette while in your pocket and also an on the go battery charger.



To charge the box simply plug the wall charger into a wall socket and connect the opposite end to the bottom of the box. When the blue LED light is lit the box is charging, when the light switches off it's finished charging.

The box can also be charged at a computer, simply remove the USB jack from the two point wall plug and plug straight into any available USB socket on your computer, the same applies when the Blue USB LED light is on the battery is charging, when it switches of the box is fully charged.


The box can also be charged in a car with a car adaptor which can be purchased from our website at www.electroniccigarettestore.co.za


Normal charging time is approximately 3 to 4 hours. Once fully charged you will be able to charge an empty ECS 88 battery up to 6 times in the box before a recharge is required.

Charging the Batteries

There are two ways to charge a battery.

1. In the Box

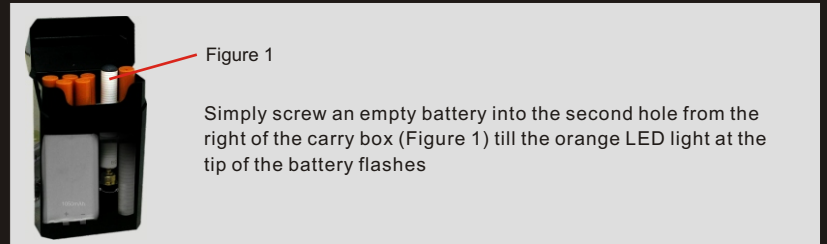

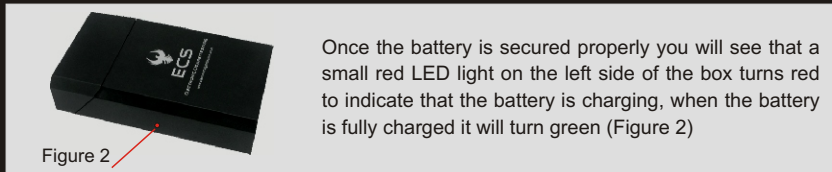

Normal Charging time is approximately 60 minutes for an empty battery in the box.

Note: Do not leave the battery on charge for more than is required, when the battery is charged unscrew from the thread and leave in the same slot unscrewed or you will drain the boxes battery power.

2. With Accessories

You can also charge the battery with a USB charger accessory which can be purchased on our website



Battery charging at computer

Battery charging at wall socket

Battery charging in Car

Replacing the Batteries

A fully charged battery should give you approximately 4 – 6 cigarettes between each charge. Longevity is impacted by the intensity of the puffs and will vary by individual. When the battery is empty, the orange LED at the end of the battery will blink 30 times intermittently.

Note: During use, the LED light might flash 10 times to warn you that you are overusing your device and you should take a break. This does not affect performance and does not mean you should recharge.

Replacing the Cartridges

On average, each individual cartridge supplies enough nicotine and premium flavouring to accommodate approximately 60 puffs depending on the users' inhalation time. When the cartridge no longer produces vapour, you'll know it's time for a replacement.

To replace the cartridge, hold the battery with one hand and pull off the empty cartridge. Check the atomizer for any foil residue and gently brush it aside using your fingers. Then firmly apply a full cartridge to the atomizer, and then twist it slightly to make sure it is secure.

Cartridge Ingredients

Our cartridges contain 4 major ingredients: propylene glycol, water, nicotine and flavouring. Our cartridges are classified into four nicotine levels: High, Medium, Low and No Nicotine and can be purchased in many flavours.

Refilling the Cartridges

A part from selling great cartridges we also sell cartridge refills (available on our website) to suit those that require a more economical method of getting their nicotine. To refill your own cartridges you will require the following items, a paper clip or similar object and a small syringe and needle.

Before you start refilling, you will need to remove the empty cartridge from the atomizer. With the empty cartridge in one hand grab a paper clip and push it in the small hole on the mouth end of the cartridge to completely remove the liquid container in side of it, put the small clear liquid container on a table and remove any excess foil on it.

Now extract about 0.3ml of the liquid nicotine into the syringe directly from the refill bottle, then remove and insert the needle to the bottom of the clear liquid container and start filling till the polyester wool looks moist, do not create a pool at the top of the liquid container as you will be over filling and will likely suck the liquid into your mouth when inhaling.

Before inserting the full liquid container back into the cartridge, 1st dry out the cartridge with a piece of tissue paper and then insert the liquid container to begin using again.

Cartridge Care and Safety

The liquid container should remain sealed in its foil wrap until you intend to use, if left open it will become dry. Do not leave unsealed cartridges lying around as nicotine is poisonous, if swallowed by a child or pet please seek immediate medical assistance and call the **South African Poison Help Line on 0800 333 444**

Each cartridge contains a density of concentrated ingredients that is safe for consumption only when used in conjunction with and vaporized by our electronic cigarette. Never inhale on a cartridge by itself without the ECS cigarette device, doing so may lead to nausea, vomiting, dizziness or the need for immediate medical assistance.

Tips Section

When you get Liquid in your mouth:

If you start to taste the nicotine in your mouth, take the cartridge off the atomizer and remove the liquid container inside the cartridge with a paper clip via the small hole on the mouth end of the cartridge, then dry the inside of the cartridge and the outside of the liquid container with a piece of tissue paper, insert the liquid container back into the cartridge and begin using again, drying out the cartridge will fix this problem most of the time.

How to drag

The best way to take a drag is to take a quick short drag followed by a long steady drag just hard enough to light up the LED at the tip of the cigarette and inhale for 4 seconds for best results.

Suitable Users

- People who have been smoking for a long period of time.
- A person that works in areas where smoking is prohibited.
- People that wish to feel the benefits of removing tobacco from the smoking equation.

Non Suitable Users

- Minors under 18 years of age.
- People that do not smoke.
- People that are sensitive to nicotine or propylene glycol.
- Pregnant and breast feeding women.

Precautions for use of Cartridge

- Storage: keep in cool dry areas, product shelf life is 24 months.
- Keep away from children and pets.
- Do not mix other liquids with the nicotine solution.

Customer Care

If you have any questions about your product, call our help desk on 087 808 2687, or visit the FAQ page at www.electroniccigarettestore.co.za or email info@electroniccigarettestore.co.za

Limited Warranty

Subject to the conditions and limitations set forth on www.electroniccigarettestore.co.za the ECS 88 electronic cigarette is guaranteed against defects in workmanship and materials, if purchased from us or any authorised Electronic Cigarette Store dealer, for a period of 3 months from date of purchase. Should any part of your product fail to operate satisfactorily, return to: P.O. Box 10035, Meerensee, 3901. Please pack the unit securely and obtain appropriate shipping insurance. Include a full description of the defect or particulars of the claim along with your return address, telephone number and proof of purchase.

The place of purchase, manufacturer or importer is not responsible for damage or loss incurred as a result of postal handling or damage caused during transit. Whenever possible send only the component in question, not the ECS starter kit as a whole.